 
 





GAME CONTROLLER

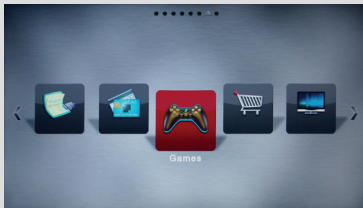

Pressing the «**MENU**» button on your Game Controller will transfer you to the «Main Menu» of the Receiver. There you choose «**Games**» and on the next window there are 3 options: **1. Native32, 2. SEGA, 3. Gamestore.**

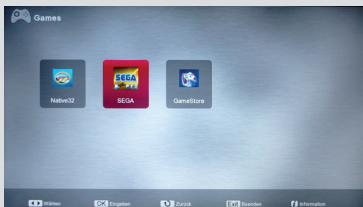

 On the submenus «**Native32**» and «**SEGA**» you can find games already installed in your receiver or USB stick. You can choose the game you prefer by using the 4-direction Navigation key and confirm your choice by pressing «**OK**».

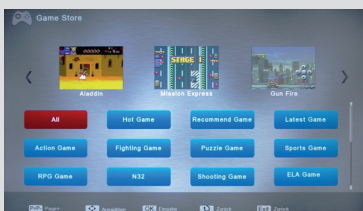

Each game has it's own configuration, which you can modify by following the respective directions on your screen.

In the submenu «**Gamestore**» you can find all 600+ games, available for you to enjoy in your Receiver. First you choose category and press «**OK**» so to view all the available games in the specific category chosen.



Games bearing the sign «**Installed**» on the bottom of their picture are already installed. Games bearing the sign «**DOWNLOAD**» on the bottom of their picture are the ones you can add in your Receiver



Installing a new game is carried out by choosing the game and by pressing the «**OK**» button on the inside screen view, while the icon «**DOWNLOAD**» is marked. As soon as the download is over, you will find the game in the respective category that belongs (eg Native32, SEGA, etc.)

ENJOY...!

