


EDISION®

VIDEO
TEXT

EDIVISION®
Elektronische Programmzeitung

Personal Video Recording
PVR

USB

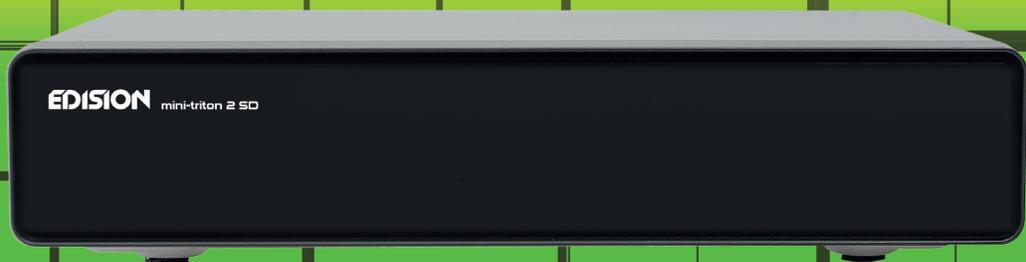DIGITAL TERRESTRIAL RECEIVER MPEG-4

mini-triton 2 SD

User's Guide

User's Guide
mini-triton 2 SD

Contents

GENERAL INFORMATION P1

Main Featur	P1
For your Safety	P2
Unpacking.....	P3
General Operation	P4
RCU.....	P4
Front / Rear Panel	P5

INSTALLATION P6

WELCOME PAGE P7

MAIN MENU P8

1. Edit Channel.....	P8
2. Installation	P11
3. System Setup.....	P12
4. Tools	P14
5. Game.....	P18
6. REC.....	P18
7. Hot key	P19

TROUBLE SHOOTING P22

GENERAL INFORMATION

This Digital Terrestrial Receiver (DTR) will take you to the new and exciting world of Digital Television. A world of crystal clear widescreen pictures, digital sound, more information and new services. All this and more on «Free to Air» Digital Television.

To make full use of your new DTR please take the time to familiarize yourself with the extensive features of the unit detailed in this User's Guide.

If you need help in setting up please call your dealer or a customer service adviser.

Main Features

- SD MPEG-2/MPEG4/SD H.264 & fully DVB-T compliant
- Automatic PAL/NTSC conversion
- 400 channels TV and Radio programmable
- 8 different favorite groups selection
- On Screen Display with multi-language
- Fully support to 7 days Electronic Program Guide(EPG)
- Picture in Graphics(PIG) support
- 256 colors On Screen Display
- Channel search in automatic, manual search
- Various channel editing functions(favorite, move, lock, rename and sort)
- Parental control for channels
- Easy to use Menu System
- Software upgrades through RS232 port and USB
- Time set by GMT offset automatic and manual,Summer Time support Automatic turn on/off
- by Timer setting(multiple options)
- Subtitle support DVB EN300743 and EBU
- Teletext support DVB ETS300472 by VBI and OSD
- Automatic save for last channel
- Support Logic Channel Number(LCN)
- Games
- Support FAT16/FAT32/FAT12,NTFS(Optional)
- MP3/ JPEG/ BMP/ OGG files

GENERAL INFORMATION

For Your Safety



- To avoid electric-shock hazards, do not open the cabinet, refer servicing to qualified personnel only.




- Keep the receiver away from flower vases, tubs, sinks, etc., in order to avoid damaging the equipment.



- Do not expose the receiver under the sunlight. And keep it away from the heat source.



- Do not block ventilation holes of the Receiver so that air can circulate freely.

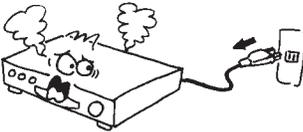


- When the abnormal phenomenon occur, you should cut off the power immediately.



- Do not touch the receiver during thunder, since that might create electric-shock hazards.



- Switch the receiver off whenever it remains out of service for an extended period.

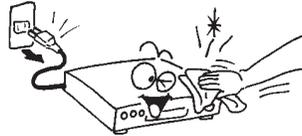

- Be sure to turn the Receiver off and disconnect the AC power cord before cleaning the Receiver surface. If the surface is dirty, wipe clean with a cloth which has been dipped in a weak soap-and-water solution and wrung out thoroughly, and then wipe again with a dry cloth.

GENERAL INFORMATION

Unpacking (optional)



- Remote Control
- Batteries
- User's manual

General Operation

- Throughout this manual you will notice that the everyday operation of the receiver is based on a series of user friendly on screen display and menus. These menus will help you get the most from your receiver, guiding you through installation, channel organizing, viewing and many other functions.
- All functions can be carried out using the buttons on the RCU, and some of the functions can also be carried out using the buttons on the front panel.
- The receiver is easy to use, always at your command and adaptable for future advances.
- Please be aware that new software may change the functionality of the receiver.
- Should you experience any difficulties with the operation of your receiver, please consult the relevant section of this manual, including the Problem Shooting, or alternatively call your dealer or a customer service adviser.

GENERAL INFORMATION

RCU




Key	Function
	Turns power ON/OFF of the DTR
	When watching a program, mute the sound
0~9	Enter number of the required menu item or select a program number to watch
TV/RADIO	Switches between TV and Radio mode
← PR	Switches back to previous program
FAV	Display the favorite program list
INFO	Shows information of the current program
FIND	Display the FIND window
Pg- Pg+	Moves up / down a page in the program list
MENU	Press this key one time to run menu onscreen, and call command box
CH+ CH-	When watching a program, change programs or move to the next higher or lower item in the menu
LIST	Executes the selected item in the menu screen or enters the desired value in any input mode
EXIT	Returns to the previous menu on the menu screen or escape from the menu
VOL- VOL+	When watching a program, adjust the volume or move to the left or right item in the menu
AUDIO	Selects the different audio modes
EPG	Calls up the EPG
PAUSE / II	Press once to pause the screen picture, press once again to go to the normal mode
V-FORMAT	Resolution
SUBTITLE	Switch to subtitles
TIMESHIFT	Start TIMESHIFT
TXT	Switch to teletext mode
GOTO/USB	GOTO/USB
ZOOM	Enter into the nine-pictures mode displayed on the screen.
REC	Record the program
	Play and stop the program
	Press to fast forward or fast backward
	Seek forward or backward
ASPECT	ASPECT Ratio screen

GENERAL INFORMATION


Front Panel



Real Panel

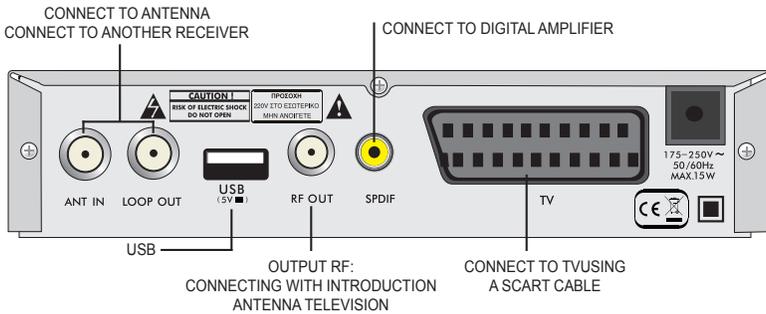


Connecting to TV using SCART support

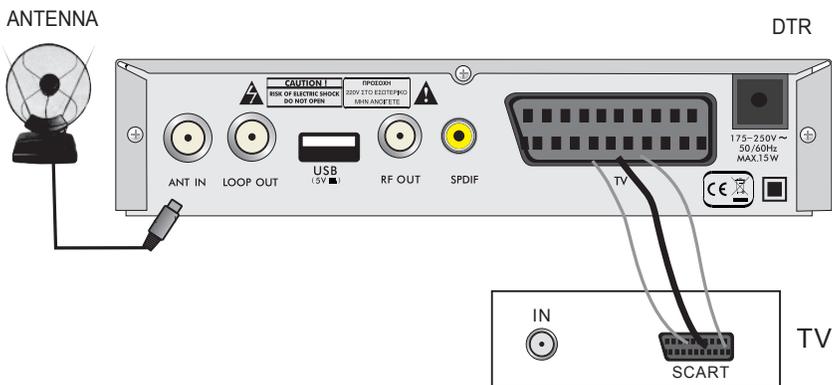

• The picture is only for reference, please make the object as the standard.

INSTALLATION

Connecting to antenna

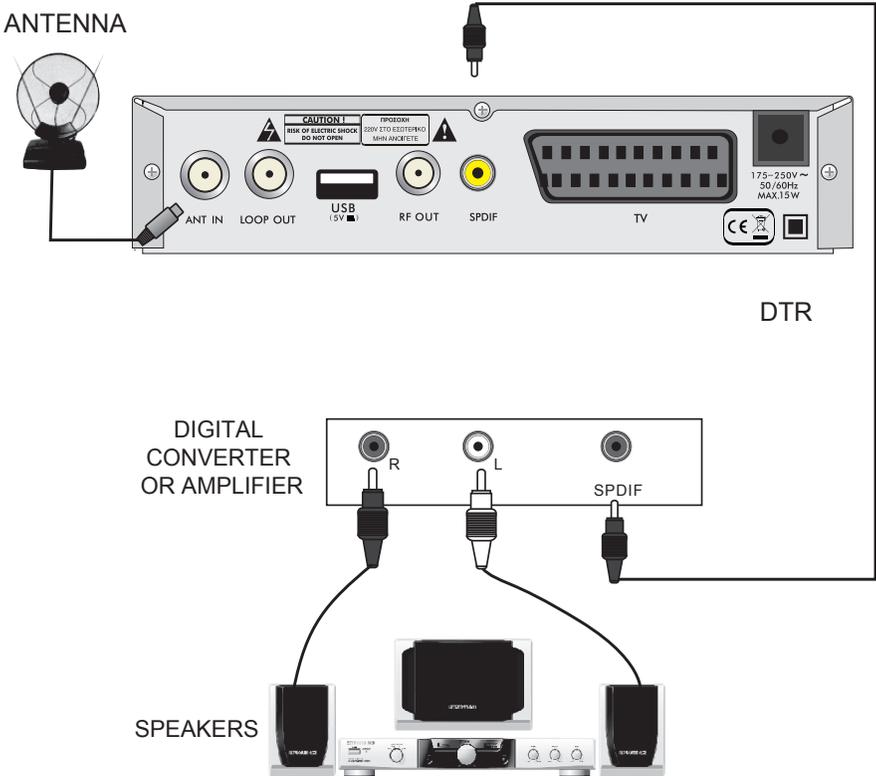

• The picture is only for reference, please make the object as the standard.

WELCOME PAGE

- When power on first time, it will show welcome page like below.
- Press ▲▼ keys to move highlight to select **Region, Display Mode, Aspect Mode and language.** Press, ◀▶ keys to move the cursor to choose your choice.



- Move highlight to [OK] option and press OK key to enter “Auto Scan” menu .



- Press [EXIT] key to exit this menu.

MAIN MENU

• When you press [MENU] key, you can enter **Main Menu**. This menu consists of 5 major sub-menus as below.

- Edit Channel
- Installation
- System Setup
- Tools
- Game
- Rec



1. Edit Channel

• Move highlight on Edit Channel item and press [OK] key to enter Edit Channel menu as besides.

This menu has 3 sub-menus such as: **TV Channel list**, **Radio Channel List** and **Delete All**.

1.1 TV Channel List

1. Press **▲▼** keys to select the program that you want to play, and then press **OK** key to view it in the small window. If move the yellow cursor to select up or down, you will see a gray line which indicates the playing program in the small window.

2. Press **FAV** key to move the FAV button upward. Select the program and press **OK** key to pop up the favourite group list. In the list, select the group that you want to add into and press **OK** key, and then you will find the favourite mark is displayed at the right side of the selected program.

Press **EXIT** key again to exit from the fav mode, and you will find the FAV button return to the origin position.

3. Press **red** colour key to move the Lock button upward. Select the program and press **OK** key to mark this program with the Lock mark. You can cancel this mark by pressing **OK** key once more. Press **red** colour key again to exit from the lock mode, and you will find the Lock button return to the origin position.



MAIN MENU

4. Press **green** colour key to move the Skip button upward. Select the program and press **OK** key to mark this program with the skip mark. You can cancel this mark by pressing **OK** key once more. Press **green** colour key again to exit from the skip mode, and you will find the Skip button return to the origin position.

5. Press **yellow** colour key to move the Move button upward. Select the program and press **OK** key to mark this program with the move mark. Press **CH+**, **CH-** keys to move the cursor to the position where you want to locate and press **OK** key to confirm. Press **yellow** colour key again to exit from the yellow mode, and you will find the yellow button return to the origin position.

6. Press **blue** colour key to enter into the **Edit channel** window.



i . Sort (red colour key)

Press **red** colour key to pop up the Sort drop-down list.


Name(A-Z): The ascending order, omitting the \$ character, the number is ahead, then the capital letter, at last the lowercase.

Name (Z-A): The opposite order of the above

Name (AZ): **Free/Scramble:** All FTA programs are listed ahead, while all scrambled programs are listed last.

Lock: all locked programs are listed at the last.

Default

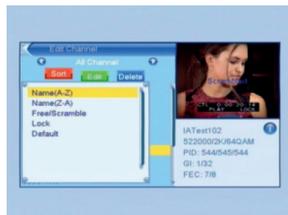

ii. Edit (green colour key)

Press green colour key to move the Edit button upward. Select the program and press OK key to pop up the Rename window.

In Rename window, press yellow colour key to switch between capital letter and lower letter; press red colour key to delete the character on the cursor; press ◀ ▶ keys to move the cursor left or right; press numeric keys (0-9) to input the character, please refer to the down table. Press blue colour key to save and exit.



MAIN MENU

If the name is empty, system will pop up a dialogue informing «Name» once yellow colour key is pressed. Press OK key to close this dialogue.

iii. Delete (blue colour key)

In Delete window, press blue colour key to move the Delete button upward. Select the program and press OK key to mark this program with the deletion mark. You can cancel this mark by pressing OK key again.

Press EXIT key to pop up the dialogue “Are you sure to save?”. Select Yes button and press OK key to save, or select NO button and press OK key to exit without saving.



1.2 Radio Channel List

Sine the same operation as 1.1 TV Channel List, here we don't explain any more.

1.3 Delete All

Move cursor to the Delete All item, and press OK Key to pop up the dialogue “Warning! Do you really want to delete all channel?”. Press EXIT key to pop up the dialogue “Are you sure to save?”. Select Yes button and press OK key to save, or select NO button and press OK key to exit without saving.



MAIN MENU

2. Installation

1. Press **OK** key or **►** key to enter into the menu.
2. Press **▲▼** keys to move the cursor up or down.
3. Press **EXIT** key or **◀** key to move the focus to the left menu.


2.1 Auto Scan

In FTA Only, press [Left/Right] key to choose Yes or No.

Move the highlight on the search option, and press [OK] key to start scanning.

Press [EXIT] key to exit this menu.

When you enter Auto Scan menu, the screen will display as below.

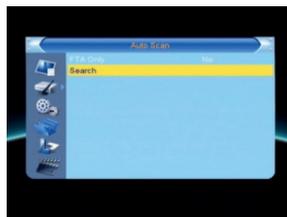

2.2 Channel Scan


When you enter **Channel Scan**, the screen will display as beside.

There are two scan modes for you. You can choose to scan by channel or by frequency.

When scan band is UHF and region is "Germany", the range of Ch Number is from 21 to 69. When scan band is VHF and region is "Germany", the range of Ch Number is from 5 to 13. (It's according to region.)

When you complete your configuration, move highlight to search option, and press [OK] key to start scanning.

Press [EXIT] key to exit the scanning and save the current parameters.

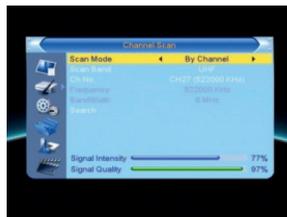

2.3 Aerial Adjustment

When you enter Antenna feeding, the screen will display as beside.

In CH No. submenu, press [Left/Right] key to choose the channel.

In Tuner Power submenu, press [Left/Right] key to choose Off and On.

2.4 LCN

Press [Left/Right] key to choose On and Off.



MAIN MENU

3. System Setup

When you enter the System Setup menu, you will see the screen like besides.

It contains 8 sub-menus such as: Language, TV System, Local Timer Setting, Timer Setting, Conax Conditional Access, Parental Lock, OSD Setting and Favorite. Press [Up/Down] key to select menu among all the items. Press [OK] key to enter the selected item.



3.1 Language

1. Press OK key to enter into the Language window. Press ◀▶ keys to select the language in circle, while press ▲▼ keys to move the cursor up or down in circle.
2. Press MENU key or EXIT key to save and exit.
3. The types of the language, please refer to the configuration of the customer.



3.2 TV System

Press ▲▼ key to move the cursor up or down, while press ◀▶ keys to change the setting and the setting will take effect immediately.

1. Video Resolution: Select between 480i and 576i.
2. Aspect Mode: Select among 4:3LetterBox, 4:3PanScan, 16:9 and Auto.
3. Video Output: Select between RGB and CVBS.



3.3 Local Time Setting

1. Region: Select the region.
2. GMT Usage: Select between On and Off. If select "Off", the GMT Offset and Summer Time item will be turned gray.
3. GMT Offset: When select "ON" in GMT Usage item, system will get the date and time information from the screen automatically. Date and Time two items will turn grey. Select the proper option in the GMT Offset item. The default setting is GMT ON.
4. Summer Time: Select between ON and OFF. "OFF" delegates the normal time. If select ON, time will add one hour.



MAIN MENU

5. Date, Time: When select «OFF» in GMT Usage, Date and Time two items take effect, while GMT Usage turns grey. Use numeric keys to input the desired value.5. After setting, press MENU key or EXIT key to exit and save. If the value is invalid, system will inform «Invalid input! Continue to edit?». Press OK key at the Yes button to continue the modification, or press OK key at the No button to exit without saving.


3.4 Timer Setting

If there is no program, you can not enter into this window. There are 8 timers that can be set. Select Timer up or down, and press OK key to enter into the setting window.

1. Timer mode: The default mode is off. You can set the timer once, daily and Off.
2. Wakeup Channel: Select the channel.
3. Wakeup Date, Time: Use numeric keys to input the valid date.

Duration: Set the gap time. After waking up, system will power off automatically after the duration time.

Press MENU or EXIT key to save and exit.

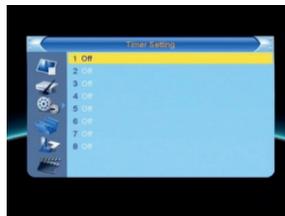

3.5 Parental Lock

Before entering into the Parental Lock window, you need input the correct password. The default password is 0000.

1. Menu Lock: Press keys ◀▶ to select between Off and On. If select "On", you can not enter into the most window before entering the password.

2. Channel Lock: Press keys ◀▶ to select between Off and On. The default value is Off.

If select "On", you can not view the locked channel set in Chanel List Edit window until you have inputted the correct password.

3. New Password: User numeric key (0-9) to input the new password.

4. Confirm Password: Input the new password once again. Confirm password must be the same as the New password. System will inform you "Change password successfully!" while they are the same, or inform you to input the password of Confirm password once again when they are not the same.

MAIN MENU

3.6 OSD Setting

1. **OSD Timeout:** Press keys ◀▶ to select from 1 to 10 by step 1.

The default values is 5.

2. **OSD Transparency:** Press ◀▶ keys to select among Off, 10%,

20%, 30%, 40%. The default

option is Off.

Press MENU or EXIT key to save and exit.



3.7 Favorite

There are 8 favorites group listed in this window. Press ▲▼ keys

to select one and press OK key to the Rename window.



3.8 Auto Standby:

Choose between activation and deactivation.

4. Tools

1. Press OK key or ▶ key to enter into the menu.

2. Press ▲▼ keys to move the cursor up or down.

3. Press EXIT key or ◀ key to move the focus to the left menu.



4.1 Information

When you enter Receiver Information menu, you should see the screen like it displays on the right.

This screen displays receiver information.

You should press [EXIT] key to cancel this menu.



4.2 Load Factory Default

When you choose the option of **Load Factory Default** and press [OK] key, you will see a screen like beside.

If you choose Yes, all the parameters of this receiver will reset to the default value.

Note: Please use this function carefully.



MAIN MENU

4.3 Upgrade by USB

1. Upgrade File: Show the Upgrade File.


2. Upgrade Mode: Select between AllCode and Dump. When users switch the upgrade mode, Upgrade File will show the corresponding file according to the table below:

Upgrade Mode	File feature
All code :	File named as "*.abs"
Main Code:	File named as "*.bin"
Radio back:	File named as "*.m2v", the picture will be used as both radio back and menu back
Default db:	File named as "*.bin"

Select the upgrade mode and upgrade file, then you can start upgrade by USB.

3. Press OK key on start button to start receiving the data from USB device.

When the USB device is not connected, this item is grey, you can not edit it now.

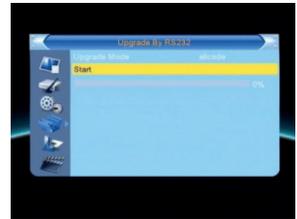

MAIN MENU

4.4 USB Device

Open USB menu according to Menu -> Tools-> USB. Press OK to enter into this window.

USB Device menu will be disabled when no USB device is plugged. Media Play List will not be saved when USB plug out or standby or power off.

Move scroll bar when press up/down key, page up or down by page key. Go into sub-directory when press ok key in the file directory, play the selected file when scroll bar is on the file, automatic return USB menu after play is over.



Function Key

Yellow key: Press to show the Play List

Blue Key: Press to select the repeat mode

1. Press number key 0 to add all music to the Play List
2. Press number key 1 to add all images to the Play List.
3. Press INFO key to display the **Setup** window.
4. Press number key 2 key to display the **Sort** window

FAV: Press FAV key add **the image you selected to the Play List.**



Play List

Press FAV key to add the image or music to Play List. Press [OK] on Play List button you can see the image or music you selected and in this list you can play and delete them.

Yellow key: Press to show the Play List.

Blue key: Press to select the repeat mode.



Music List

Press PR+ ,PR- key to select the music you want, and press FAV key to added it to the music list, or you can press number key 0 to add all the music to music list.

Press yellow key and select the music button in the window, you can see the music you selected and in this list you can play and delete the music.

Yellow key: Delete the music you selected.

Blue key: Press to select the repeat mode.



MAIN MENU

When you playing the music press ◀ key to play previous music, and press blue key or ▶ key to play next music
Press “■▶” keys to stop and play again.
Press blue key to switches the circulation mode.



Image List

Press PR+,PR- key to select the iamge you want, and press FAV key to added it to the image list, or you can press number key 1 to add all the images to image list.

Press yellow key and select the image button in the window, you can see the iamge you selected and in this list you can play and delete them.

Yellow key: Delete the music you selected.

Blue key: Press to select the repeat mode.

Setup

Show Image Size: Select between full and real.

Slide Show Time: Select among 1-10sec.

Slide Show Repeat: Select between on and off.



Sort

Pressing number key 2, it will pop up the Sort drop-down list.

Name(A-Z): The ascending order, omitting the \$ character, the number is ahead, then the capital letter, at last the lowercase.

Name (Z-A): The opposite order of the above Name (A-Z).

Image list

Music list

4.5 Remove USB Device safely

1. Press OK key on **Remove USB device safely** it will pop up a dialog:”You can safely remove USB device now!”. Press OK on Yes button to remove the USB device.



MAIN MENU

5. Game

1. Press OK key or ► key to enter into the game.
2. Press ▲▼ keys to move the cursor up or down.
3. Press EXIT key or ◀ key to move the focus to the left menu.
4. Select the game that you want to play and press OK key to enter into the window.



6. REC

6.1. Record Manager

1. Press ▲▼ keys to select up or down,
2. Press green color key to lock the file you selected, the lock symbol will be marked behind the file. Before you lock the file you must input the correct password, the default password is 0000.
3. Press blue color key to delete the file you selected.
4. Press red color key to pop up the window for renaming the file you selected, press numeric keys (0-9) to input the character .
5. Press [Play] key to preview. Press [OK] to play the recorder in full screen as below picture.
6. Press [Pause] key to pause. Press [Pause] key repeatedly to realize the step function. Press ◀ / ▶ key to fast Forward or fast backward. Press key ◀ / ▶ to slow forward or slow backward.



6.2 Disk Information

Show you the information in windows as besides.



MAIN MENU

6.3 DVR Configuration

1. Timeshift: Select between on and off.
2. Record Type: Select between PS and TS.
3. Record Selection: Select the USB partition.



6.4 Jump

Select among 30sec, 1min, 5 min, 10 min and 30 min.



7. Hot Key

7.1 Number

Use the numeric keys (0-9) to input the number of the desired channel. If the inputted number is beyond the valid channel number, system will «Invalid number» and press OK key to close this message.

7.2 TV/RADIO

In normal mode, press **TV/RADIO** key to switch between TV mode and Radio mode.

7.3 Up/Down (Channel Change)

Press **CH+**, **CH-** keys to change the channel up or down.

7.4 Left/Right (Volume +/-)

Press **VOL+**, **VOL-** keys to change the volume. Press **VOL-** keys to decrease the volume by step 1, while press **VOL+** keys to add the volume by step1.

7.5 Mute

Press  key to close the volume. You can press  key once again to restore the volume, or press **VOL+**, **VOL-** keys to open the volume.

7.6 Pause

During the viewing, you can press **PAUSE** key to stop the picture while the volume continues. You can play the picture by pressing **PAUSE** key once again.

7.7 Teletext

Press **TXT** keys to open the teletext on the screen. If there is no teletext, system will inform «No Teletext Data». Press **EXIT** key to exit.

MAIN MENU


7.8 OK

1. During the viewing or listening, press **OK** key to pop up the TV program list or the Radio program list.
2. Press **▲▼** keys to select the channel up or down, and then press **OK** key to play this channel in full-screen.
3. Press **◀▶** keys to select the channel.
4. Press **MENU** or **EXIT** key to close this window.



7.9 Audio

1. Press **AUDIO** key to enter into the Audio window.
2. Press **◀▶** keys to select between Left, Right Stereo and MONO.
3. Changing the audio mode is only connected with the current channel, not all the channels.
4. Press **MENU** or **EXIT** key to close this window.

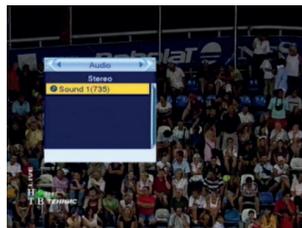

7.10 Recall

Press **←PR** key to switch the current channel to the previous channel.

7.11 Info

Press **INFO** key to enter into the information Window.

7.12 FAV

1. Press **FAV** key to pop up the favourite group window.
2. Press **◀▶** keys to select the favorite group. Press **▲▼** keys to select the channel up or down. Press **OK** key at the selected channel to view it in full-screen. Press **MENU** or **EXIT** key to exit.
3. If there is no favorite channel, system will inform «No FAV Channel!» when you press **FAV** key.



7.13 Multi-picture

- Press **ZOOM**  key to multi-picture on the screen.
- If you want to select channel, use the **▲▼**, **◀▶** key on the RCU to select a cell and press **OK** key to enter.



MAIN MENU

7.14 EPG

Press **EPG** key to enter into the EDV window.

1. Press **▲▼**, **◀▶** keys to select up or down, left or right.

2. Press **red** colour key to pop up the Time Bar window.

Press **▲▼** keys to select up or down, while press

◀▶ keys to select left or right in the time bar.


⏪ : Press **OK** key at this button to return to the EPG window.

⏩ : Press **OK** key at this button to move the cursor to the current time line.

◀▶ : Press **OK** key to push the time forward or backward by half an hour.

◀▶▶ : Press **OK** key to push the time forward or backward by half an hour.

◀▶▶▶ : Press **OK** key to push the time forward or backward by a day. From the current day, you can switch among the future 14 days in circle.

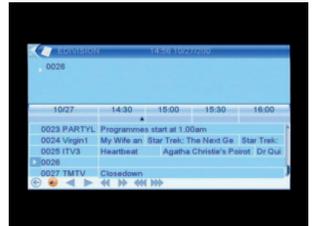

3. Detail Information: In the **EPG** window, press **▲▼**, **◀▶** keys to select the channel and program, and press **OK** key to know the detail information of the current program.

4. Press **green** colour key to enter into the **Timer** window. You can add the current program to the Timer. If 8 timers is already, system will inform «Timer is full!».

7.15 Teletext

Press **TXT** keys to open the teletext and subtitle window on the screen.

TROUBLE SHOOTING

Problem	Possible causes	What to do
The display on the front panel does not light up.	Main cable is not connected.	Check that the main cable is plugged into the power socket.
No sound or picture, but the front panel shows red light.	The receiver is in standby mode.	Press the standby button.
No sound or picture.	No signal or weak signal.	Check the cable connections, antenna and other equipment connected between the antenna and the receiver.
	Signal is too strong.	Connect a signal attenuator to the antenna input.
Bad picture / blocking error.	Antenna noise factor too high.	Change to an antenna with lower noise factor.
	The antenna is faulty.	Change the antenna.
The picture is not displayed on the screen, when switching on.	The system is connected by RF leads.	Check the UHF channel fixed in your system and tune the UHF channel properly.
There is interference on your terrestrial program or video signal.	The system is connected by RF leads and the output program of the receiver interferes with an existing terrestrial programs or Video signal.	Change the receiver output program to a more suitable program, or connect the system by SCART leads.
The RCU is not working.	Battery exhausted.	Change the batteries.
	RCU is incorrectly aimed.	Aim RCU at the receiver, or check that nothing blocks the front panel.

- Note : If you have tried all of the actions suggested above, without solving the problem, please contact your dealer or a customer service adviser.

www.edision.gr