




1

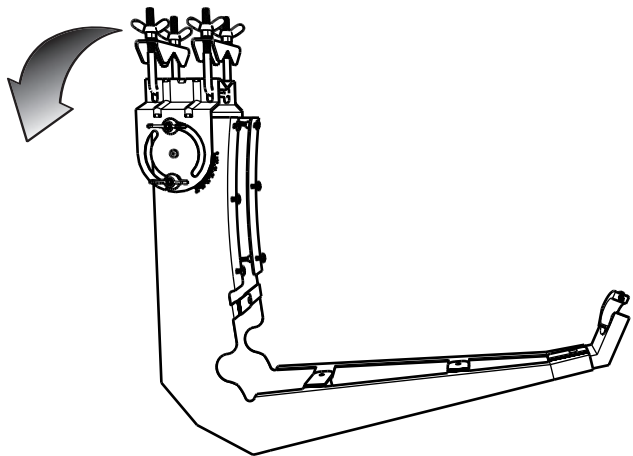


2

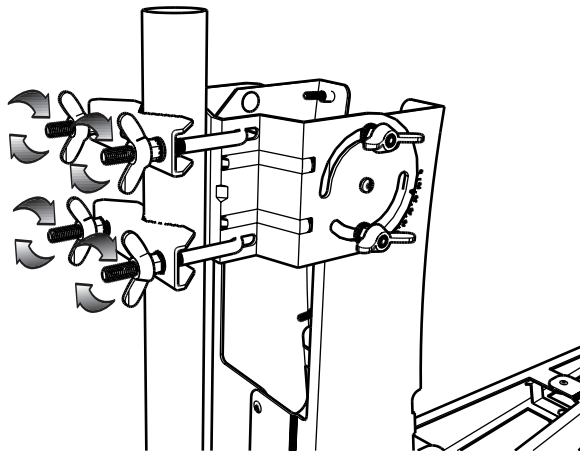


3

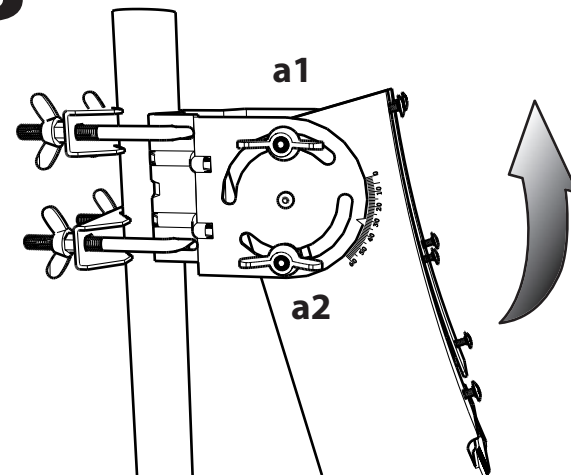


4

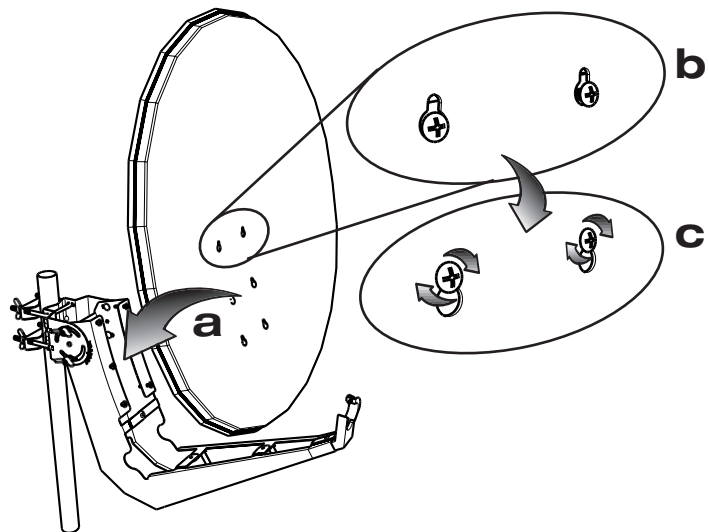

5

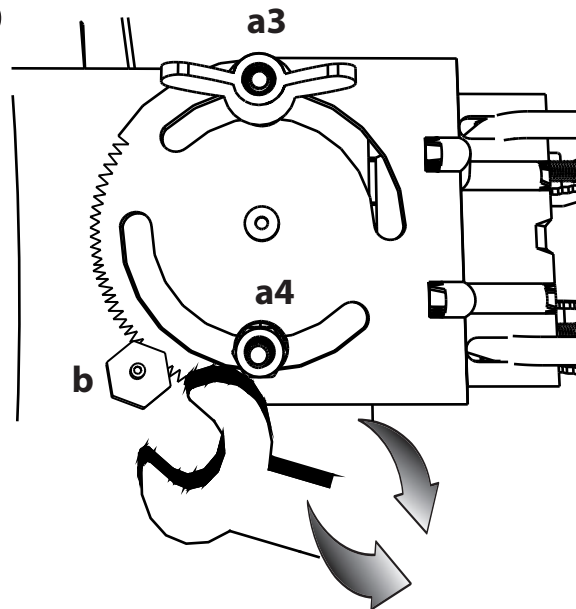

6

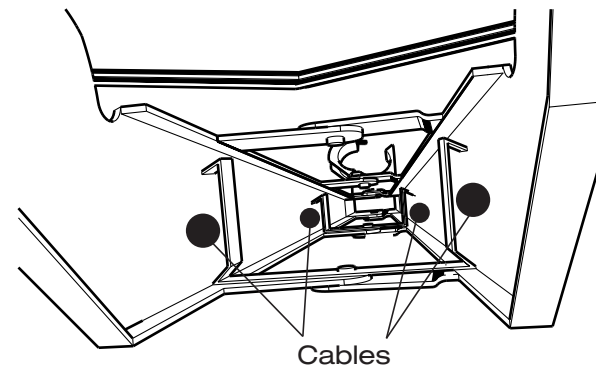

KF100FDB 18.07.2018
KF100FDG 18.07.2018
KF100FDR 18.07.2018

1-Loosen the a1-a2-a4 nuts, keep the a3 nuts at minimum tight just to avoid that the dish will falls down
2-Adjust fine tuning of the elevation by acting on the b nut of fig.5 with 17mm tool.
3-Found the best reception tighten all a nuts.

Coppie di serraggio - Torques:
M8 10N/m
M6 4,5N/m

